
Linear Troffer Retrofit Kit Install Instruction

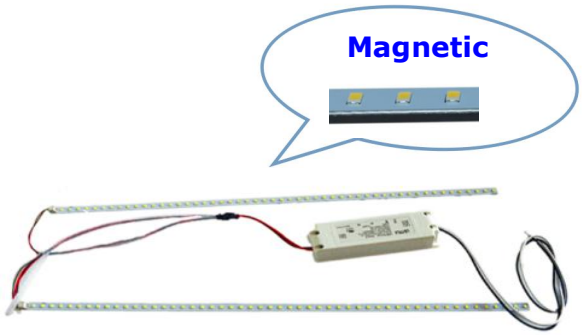

LED Retrofit Kit-Overview

LED Linear Troffer Retrofit Kit Strips are economic LED replacements for 1'x4', 2'x2 and 2'x4' existing recessed troffers in drop-in ceilings. The kits are easily field installed using simple hand tools with minimum modification to the existing housings.

General Safety Information

1. Review the diagrams thoroughly before beginning.
2. Two people recommended for installation, and performed by qualified personnel.
3. All electrical connections must be in accordance with local codes, ordinance, and the National Electric Code. If you are unfamiliar with methods of installing electrical wiring, secure the services of a qualified licensed electrician.
4. Before starting the installation, disconnect the power by turning off the circuit breaker or by removing the appropriate fuse at the fuse box. Turning the power off using the light switch is not sufficient to prevent electrical shock.
5. Equipment should be mounted in locations and at heights where it will not readily be subject to tampering by unauthorized personnel.

Install Instruction

1.Remove the original fluorescent tube



2. Remove the ballast.




3. Remove other irrelevant parts of the troffer



4. Connect the driver's output line and power line




5. Connect driver's input line and kit's line

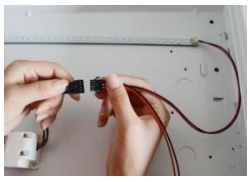

6. Fasten the magnetic strip and driver



7. Close the cover of the driver

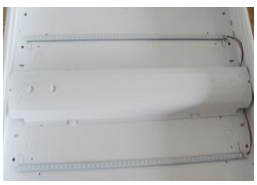

8. Close the cover of the troffer

